

FIG. 1



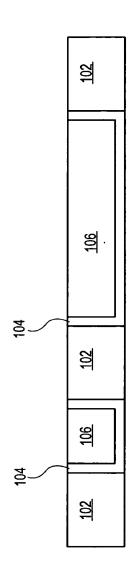


FIG. 2



	302
PROVIDE A SLURRY HAVING AN ABRASIVE HARDER THAN A FIRST LAYER AND LESS HARD THAN AN UNDERLYING SECOND LAYER TO POLISHING PAD)
	304
BRING SUBSTRATE WITH FIRST LAYER THEREON INTO CONTACT WITH POLISHING PAD	
	306
POLISH FIRST LAYER	
	308
STOP POLISH ON SECOND LAYER	

FIG. 3